


Installation Instructions

- 1. Stop compressor air to blast pot.
- 2. Depressurize blast pot.
- 3. Using a pipe wrench, unfasten air pipe coupling from ball valve (see right).
- 4. Insert Farrow Flow between ball valve and the air pipe coupling to the air pipe as shown. HAND TIGHTEN ONLY!
- 5. Start compressor and pressurize system.
- 6. After an hour of use, hand tighten insert again since heat will cause expansion.

PLEASE NOTE: Dosing valve should be adjusted after installation since less media will be needed to blast.

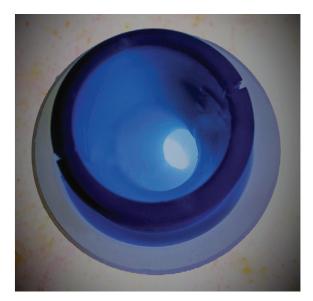





Farrow Flow Options

Farrow Flow insert is effective for use in:

- Dry Blasting
- Slurry Blasting
- Dustless Blasting
- Vapor Blasting
- Dry Ice Blasting
- MANY MORE TO COME...



www.farrowflow.com